

4 x \varnothing 4x40mm
wood screw

Article:

Doghouse Collie

Article nr:


93

Last modified:

01.03.2011

Page:

2/9

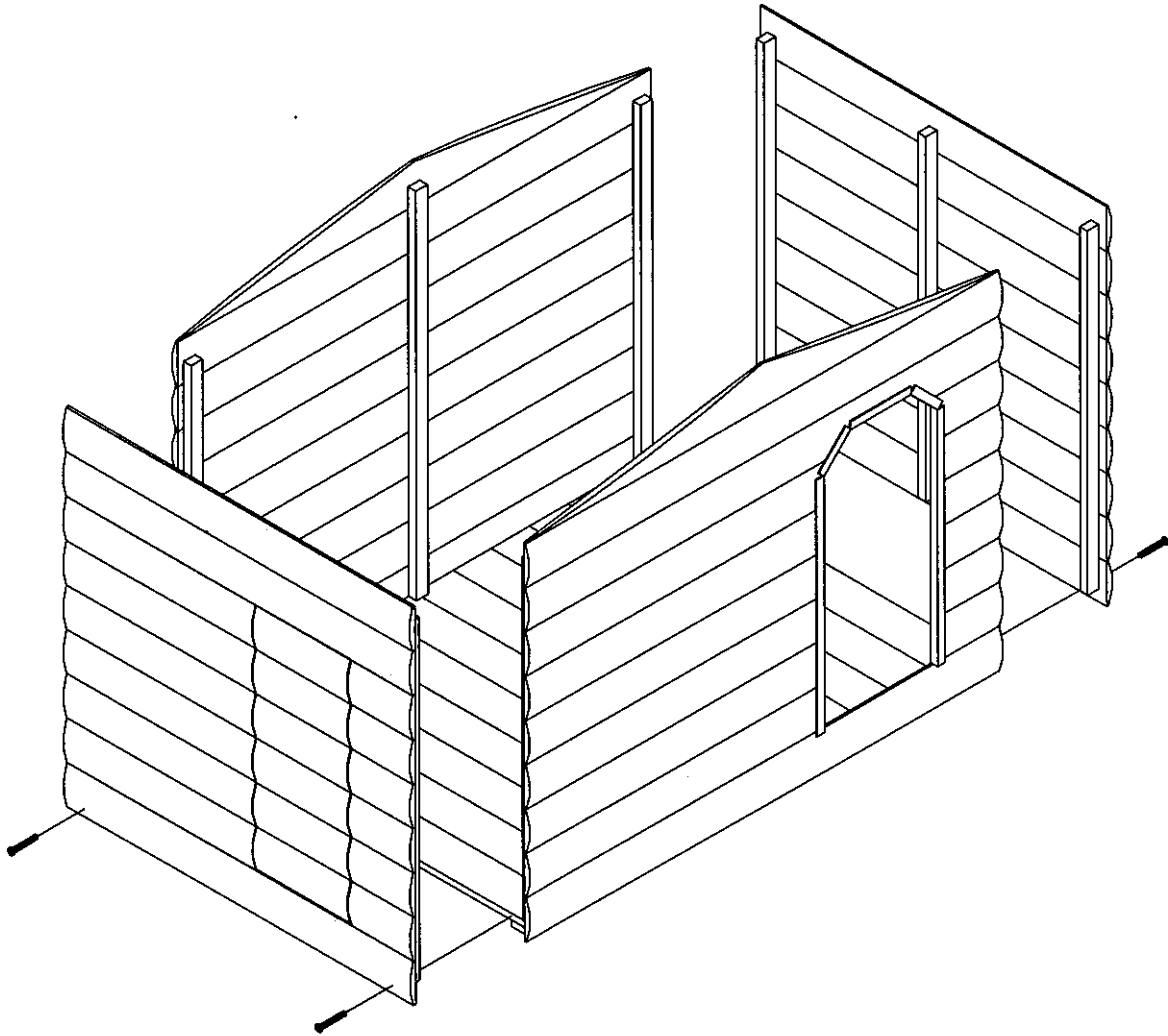

4 x \varnothing 4x40mm
wood screw

Article:

Doghouse Collie

Article nr:


93

Last modified:


01.03.2011

Page:

3/9

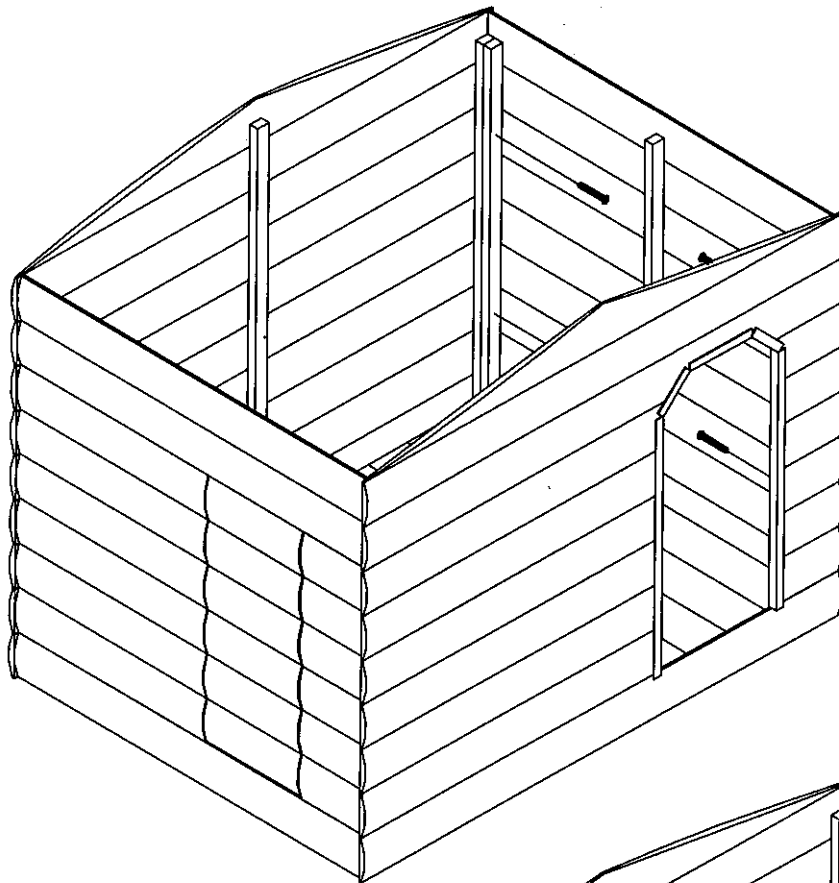

8 x Ø4x60mm
wood screw

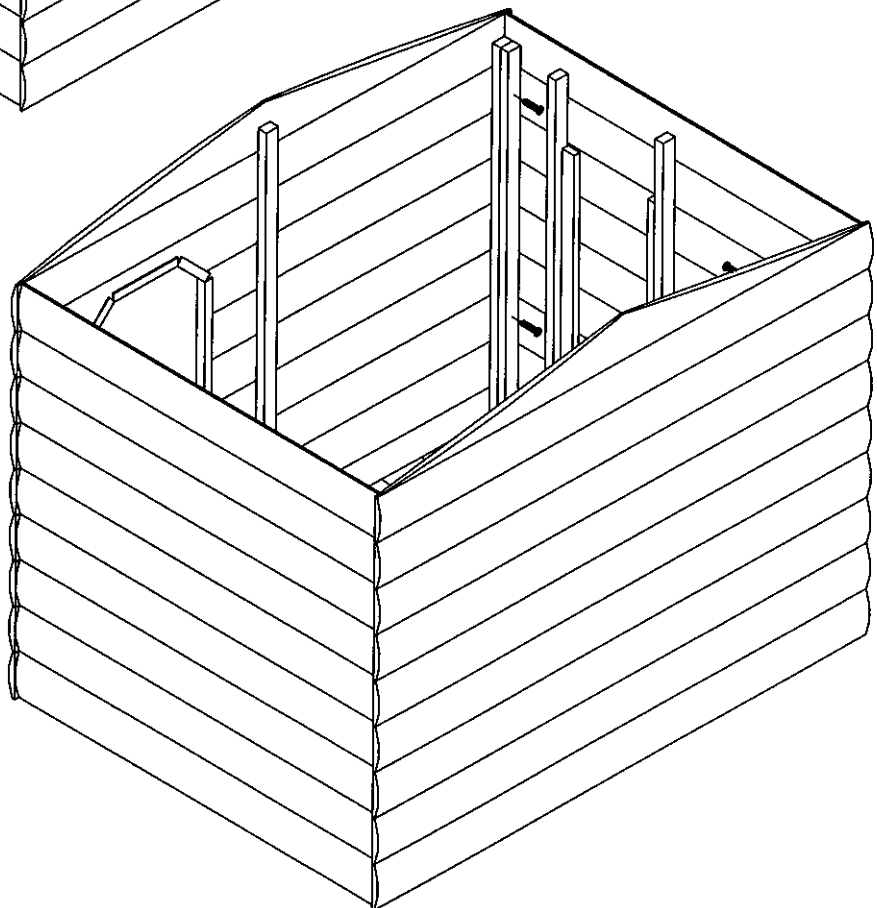

Article:

Doghouse Collie

Article nr:

93


Last modified:

01.03.2011

Page:

4/9

2 x Ø4x60mm
wood screw

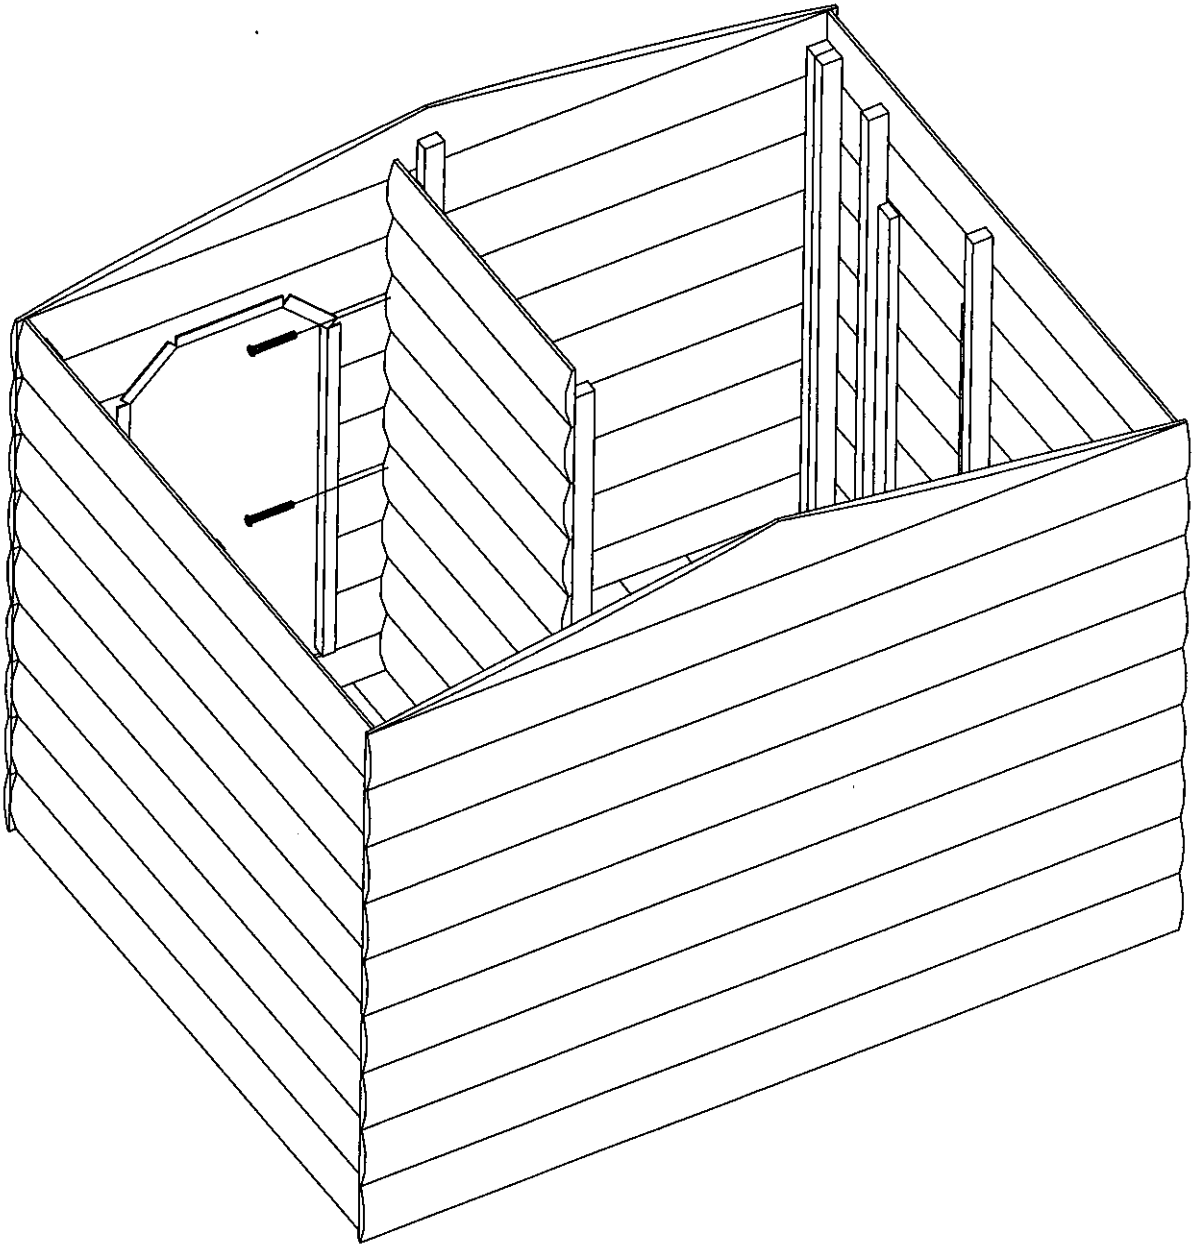

Article:

Doghouse Collie

Article nr:


93

Last modified:

01.03.2011

Page:

5/9

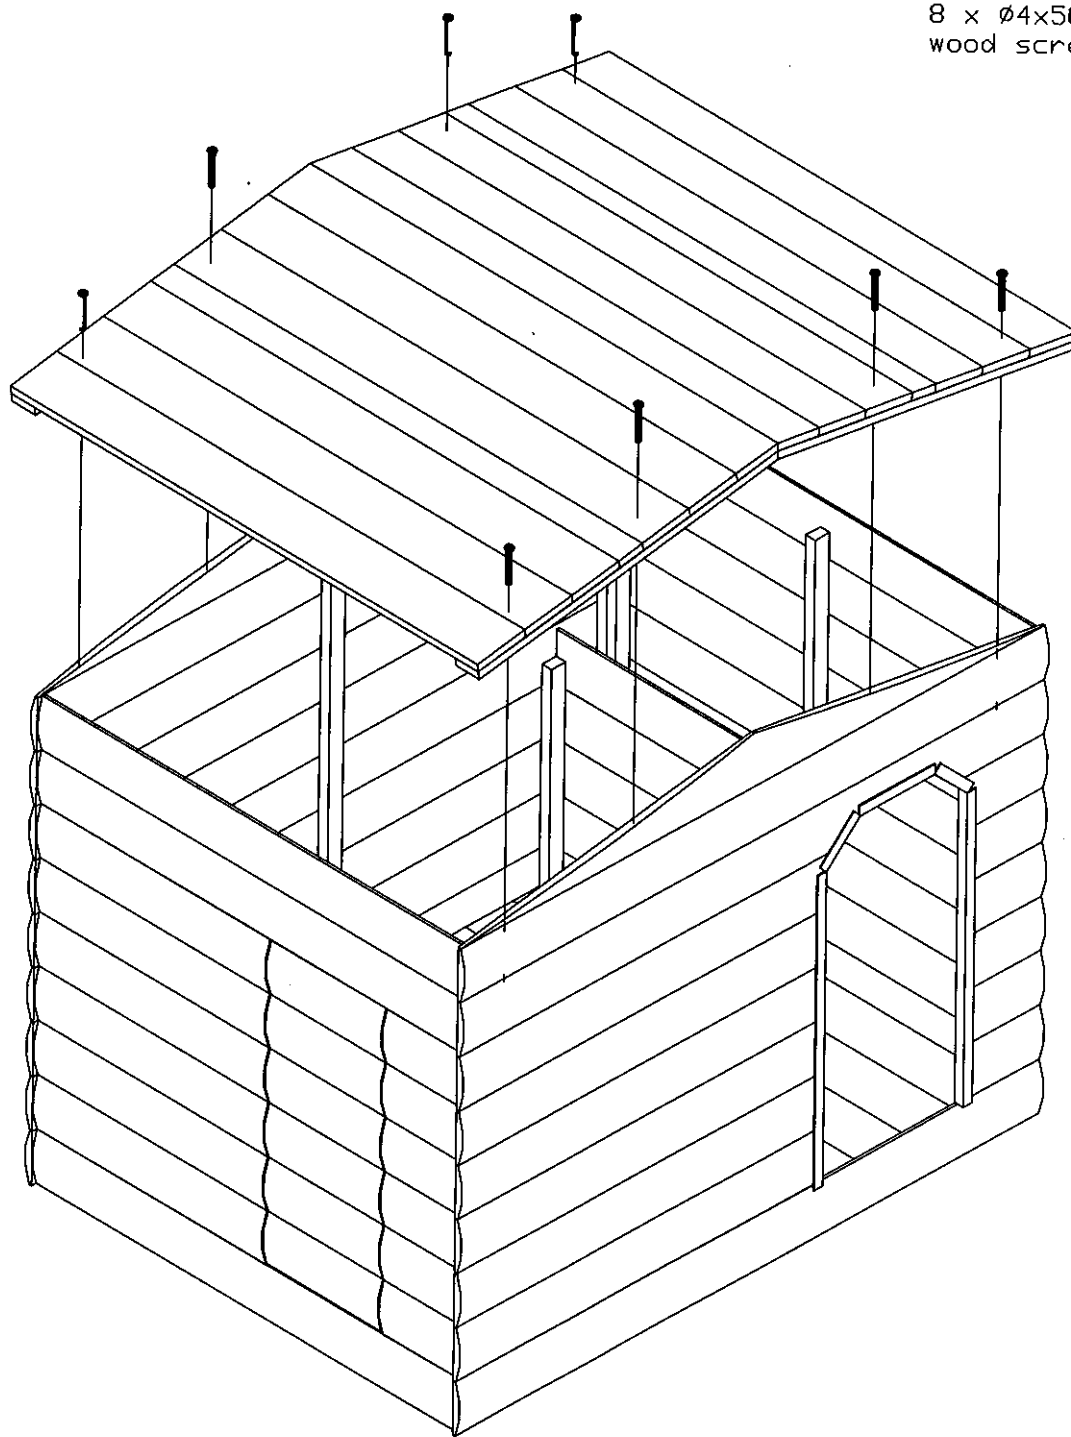

8 x Ø4x50mm
wood screw

Article:

Doghouse Collie

Article nr:

93

Last modified:


01.03.2011

Page:

6/9

Lay a roofing
paper

8 x \varnothing 4x35mm
wood screw

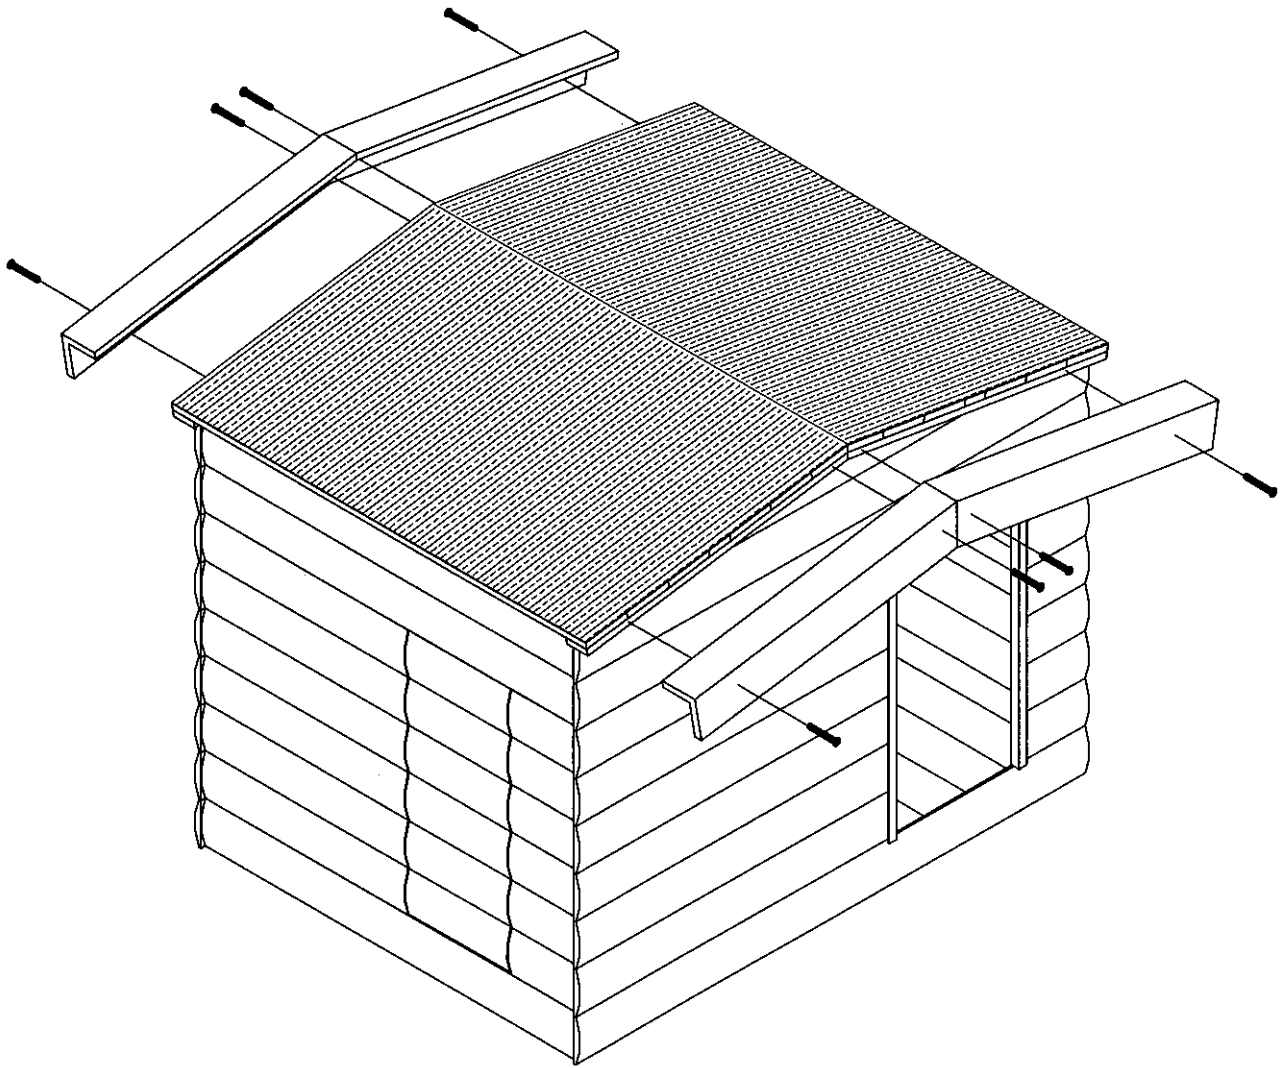

Article:

Doghouse Collie

Article nr:

93


Last modified:

01.03.2011

Page:

7/9

8 x \varnothing 4x35mm
wood screw

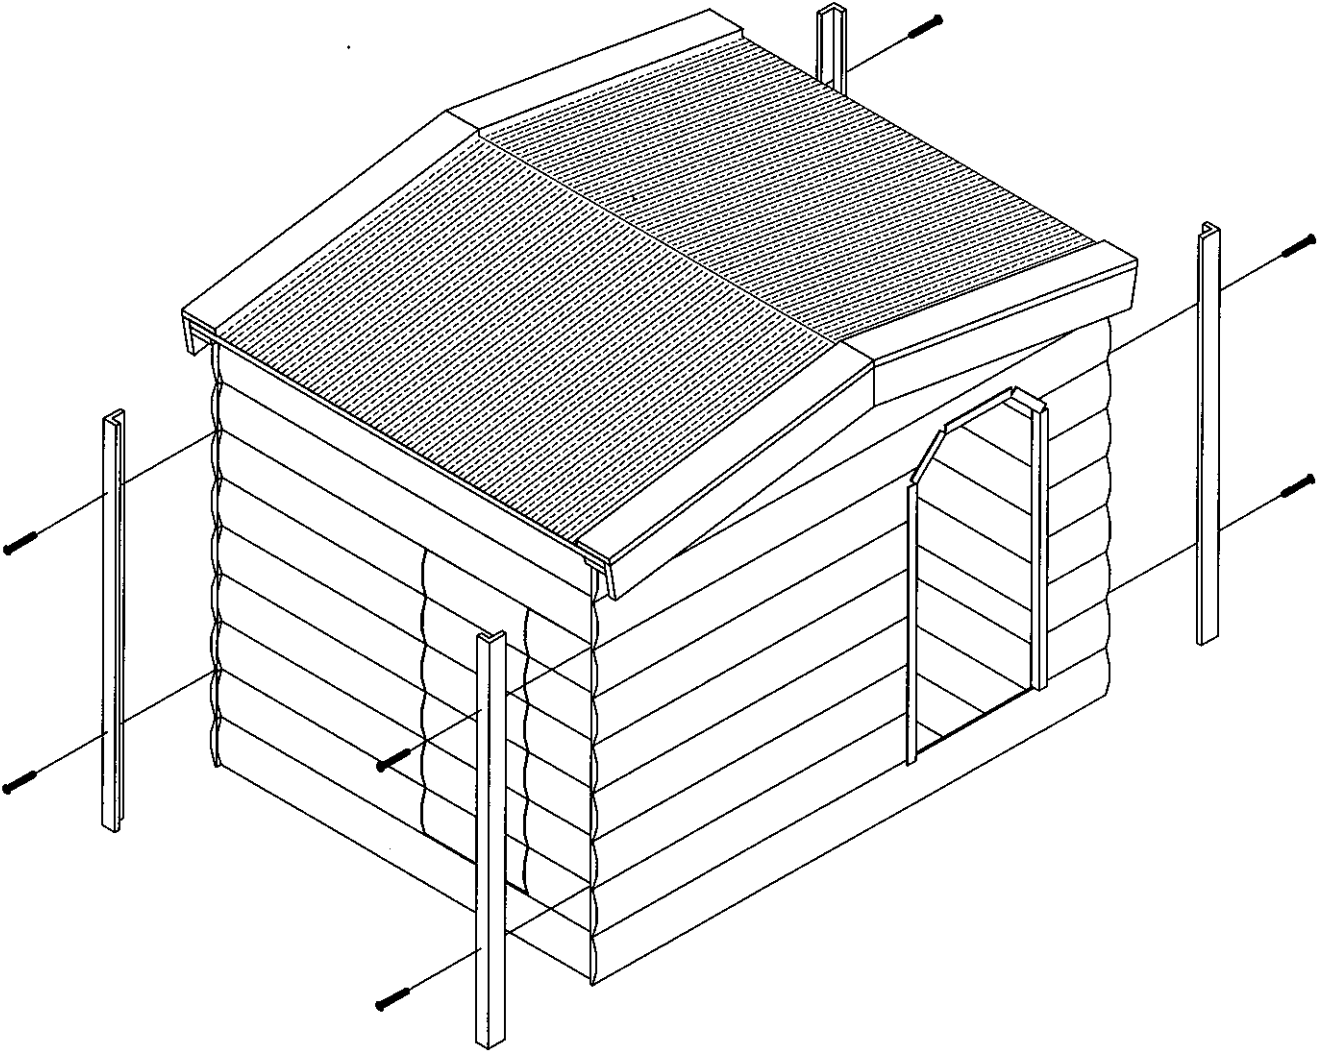


Article:
Doghouse Collie

Article nr:
93

Last modified:
01.03.2011

Page:
8/9

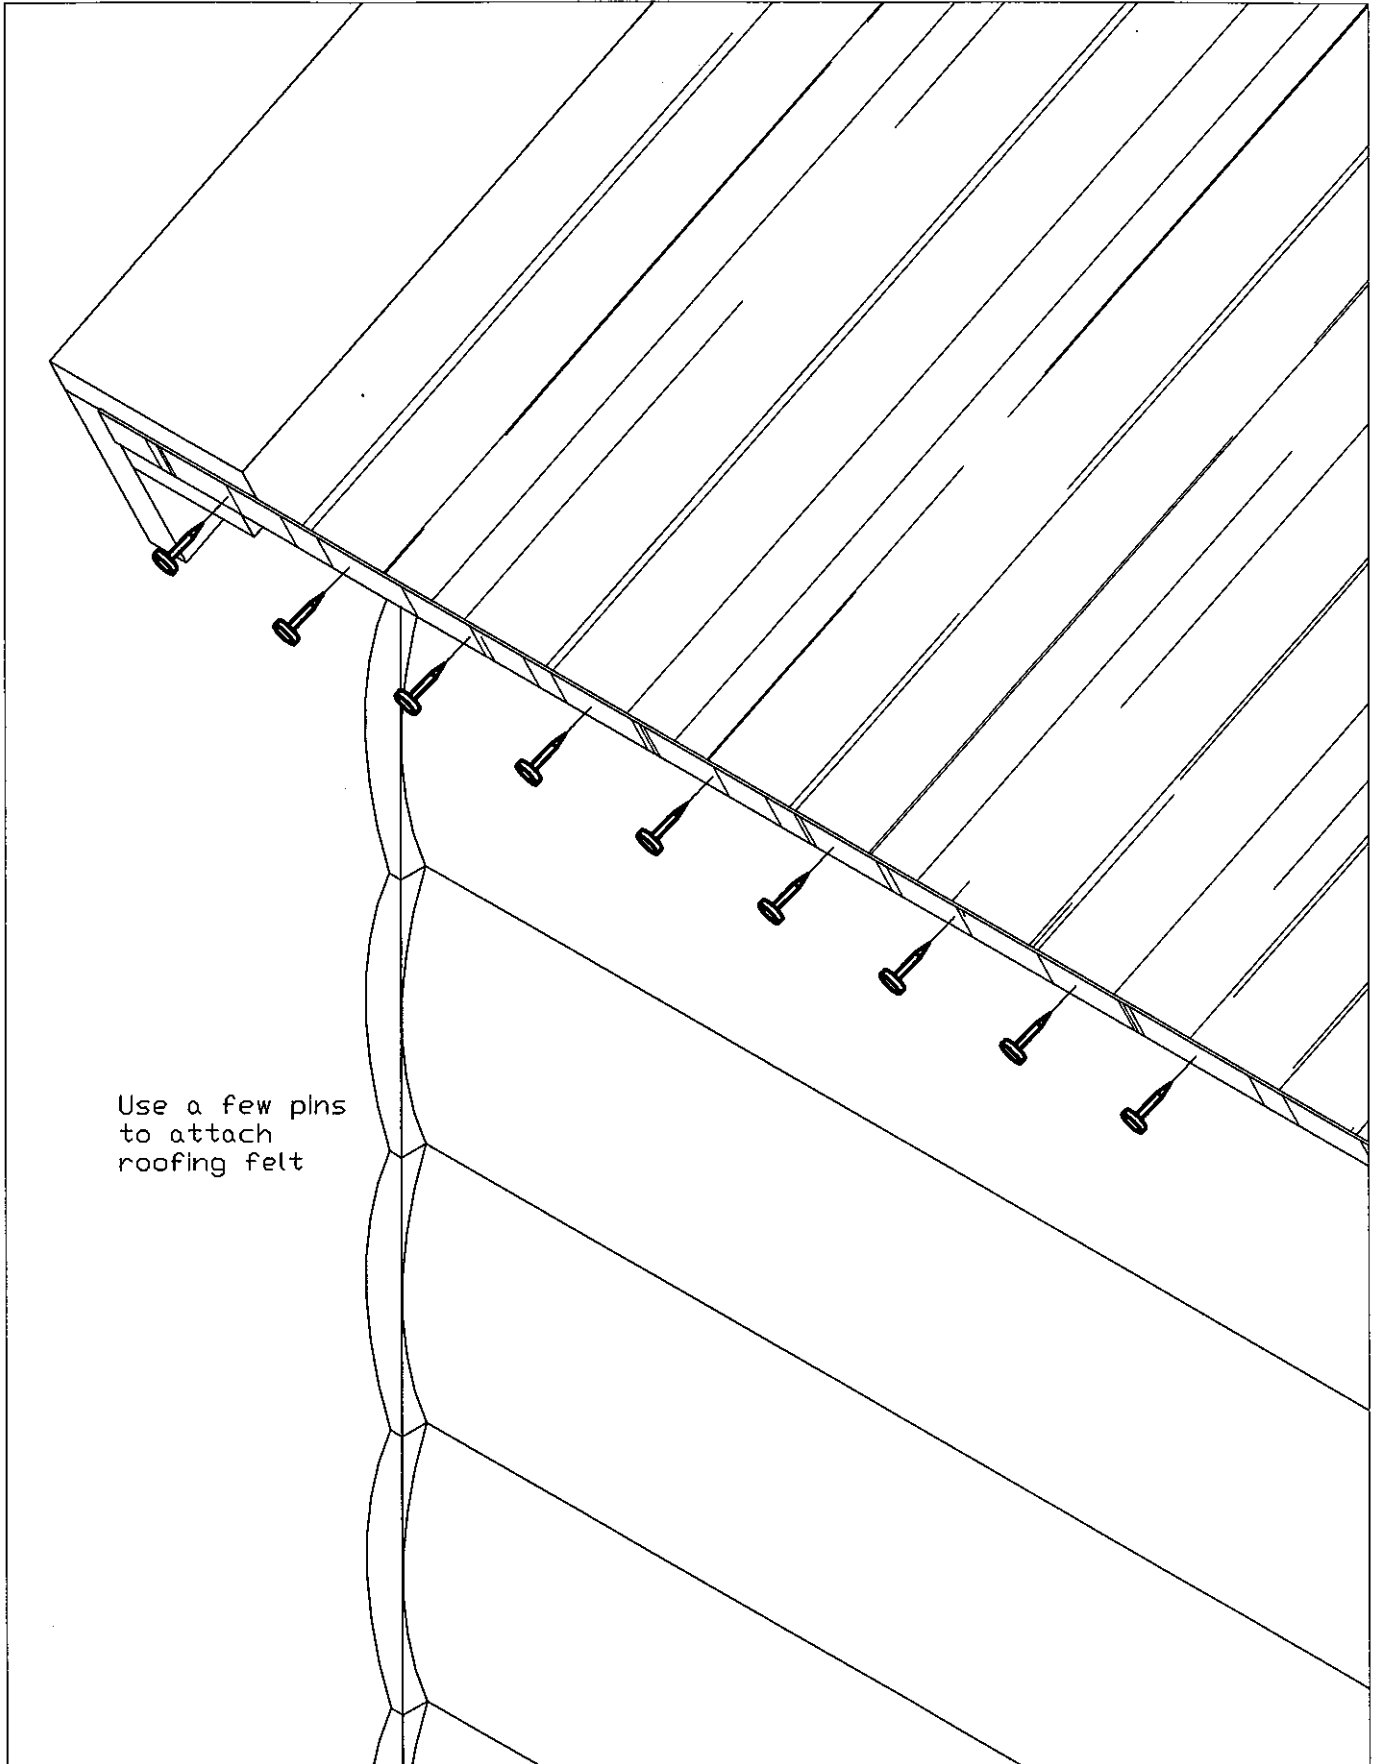

Use a few pins
to attach
roofing felt

Article:		Doghouse Collie	
Article nr:	93	Last modified:	01.03.2011
		Page:	9/9